


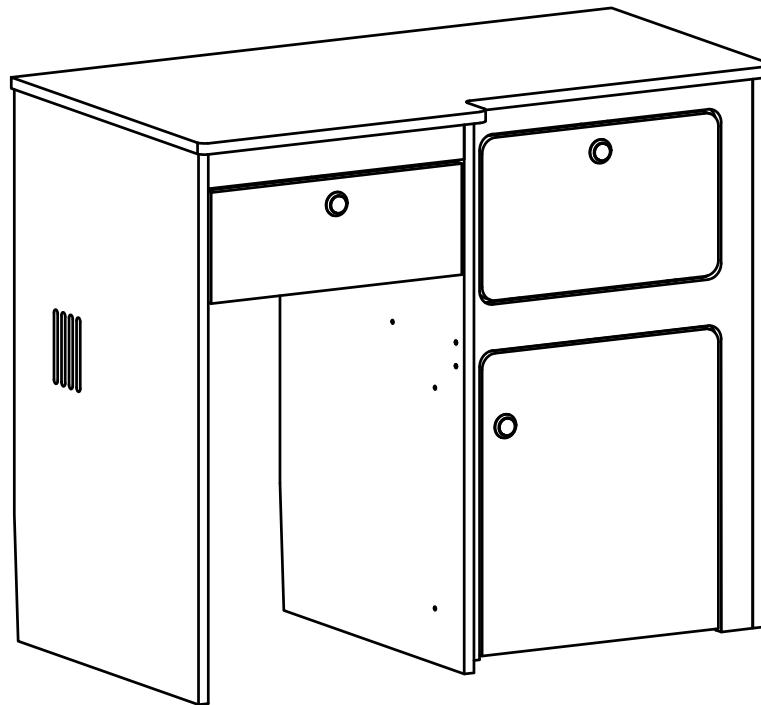

POD ASSEMBLY INSTRUCTIONS




COMPONENTS




SCREW (A)




11MM PIN (B)

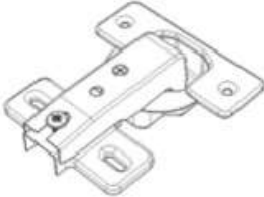


BLIND HINGE (C)




CAM (D)

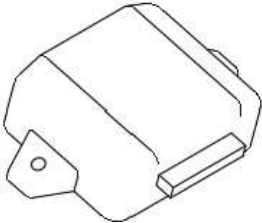


DOOR LATCH (E)

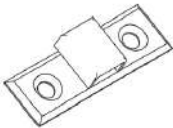


HINGE BRACKET (F)




ROSETTE (G)

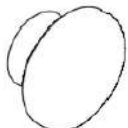


PUSH BUTTON (H)




CATCH (I)



PLASTIC GROMMET (J)

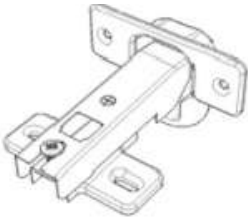


OVERLAY HINGE (K)

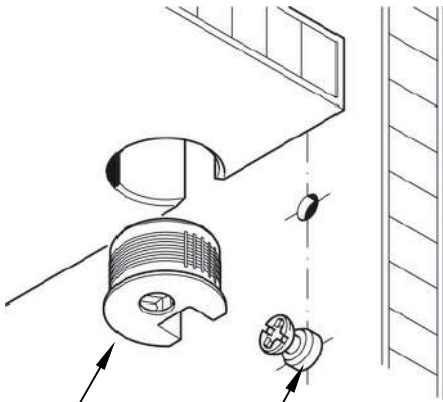

CAM


11MM PIN

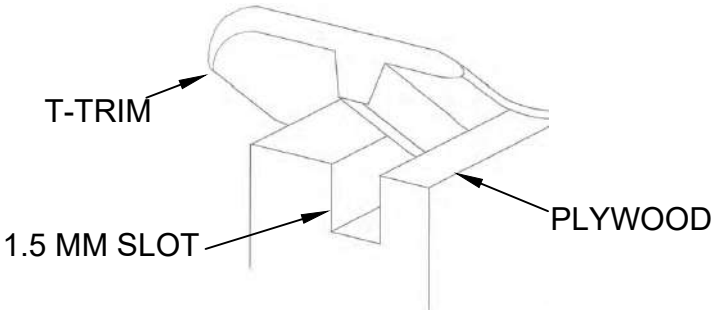

T-TRIM

1.5 MM SLOT

PLYWOOD



CUT A NOTCH OUT OF THE T-TRIM TO GO AROUND CORNERS

TOOLS REQUIRED



USE FOR T-TRIM AND CAMS



USE FOR TIGHTENING CAMS AND $\frac{5}{8}$ SCREWS



USE FOR CUTTING T-TRIM



USE TO SOFTEN T-TRIM

PANEL NUMBERS

USE THIS DOOR
IF YOU ARE NOT
INSTALLING A
FRIDGE

PLEASE READ THIS BEFORE ASSEMBLY


WARNING SHARP EDGES



USE A HEAT GUN TO SOFTEN THE EDGES OF THE T-TRIM THIS WILL MAKE IT EASIER TO FIT AROUND THE INTERNAL AND EXTERNAL CORNERS.

USE A Mallet TO PUT THE CAMS AND THE T-TRIM ON.

DO NOT OVER TIGHTEN THE CAMS.



T-TRIM ALL THE PANELS THAT HAVE A 1.5MM SLOT IN THEM IN ASSEMBLY PROCESS. LEAVE PANELS 8 AND 10 UNTIL THE UNIT IS ASSEMBLED.

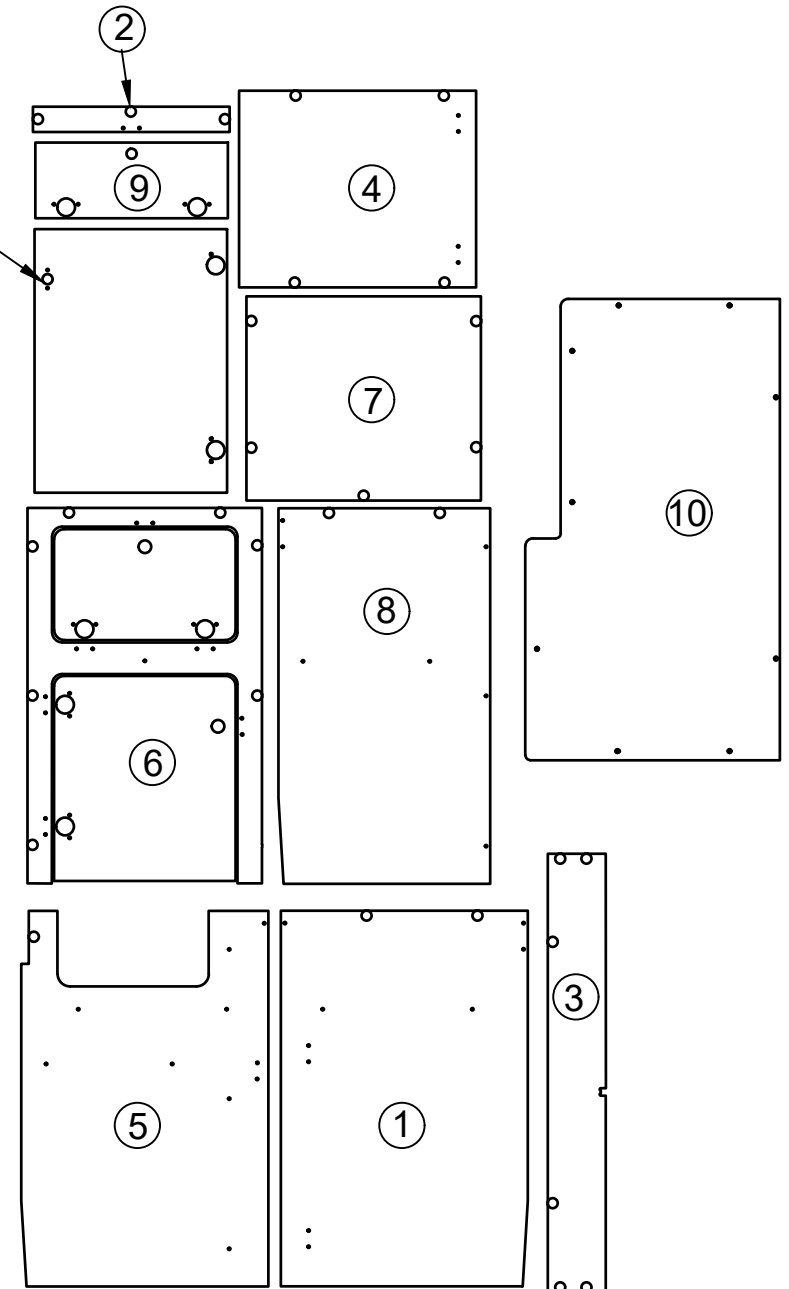




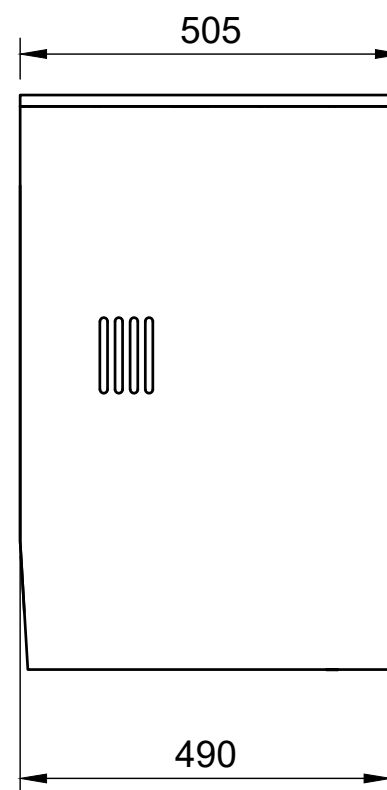
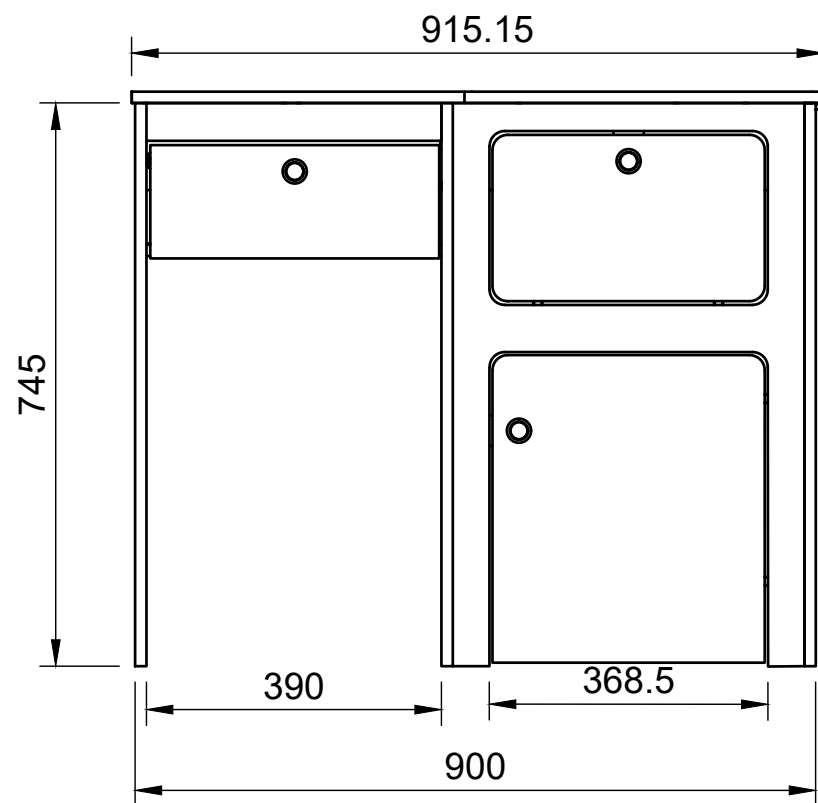


ROSETTE ASSEMBLY



REPEAT THIS ON
ALL OF THE DOORS
AND DRAWER
FRONTS

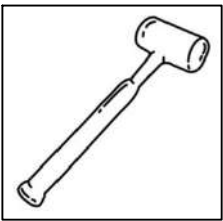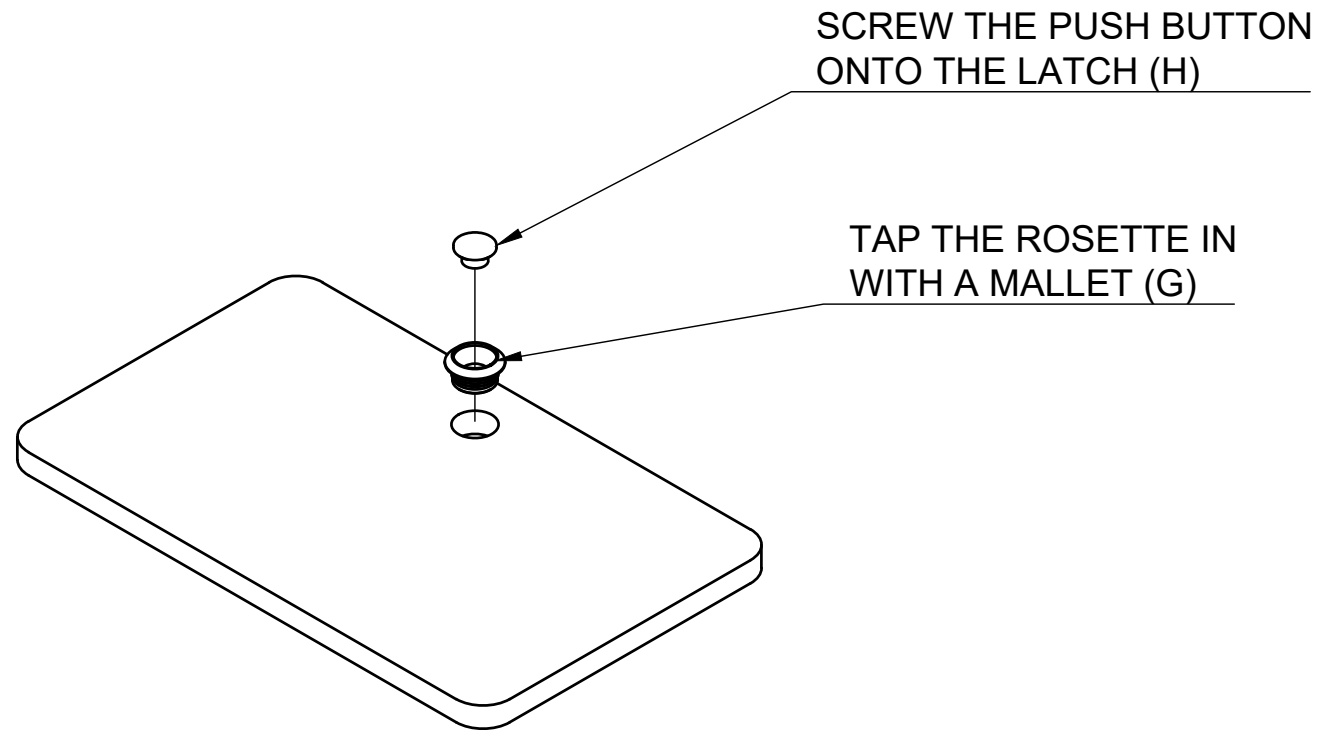

PANEL ASSEMBLY

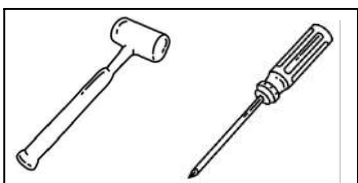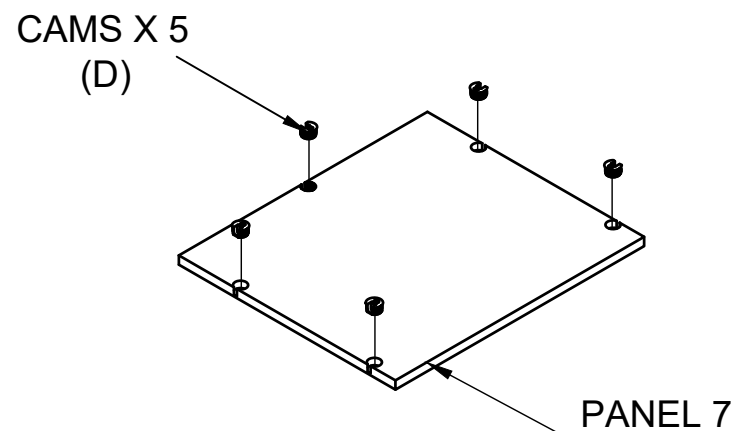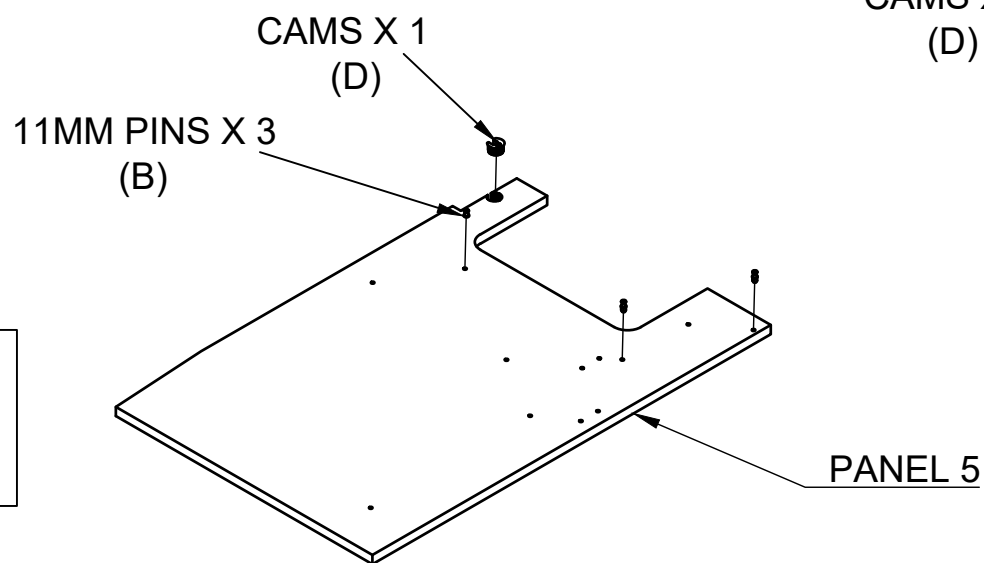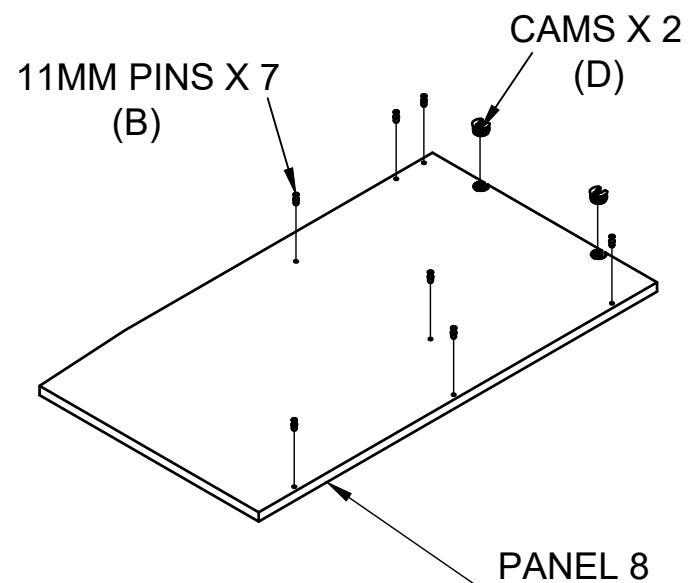
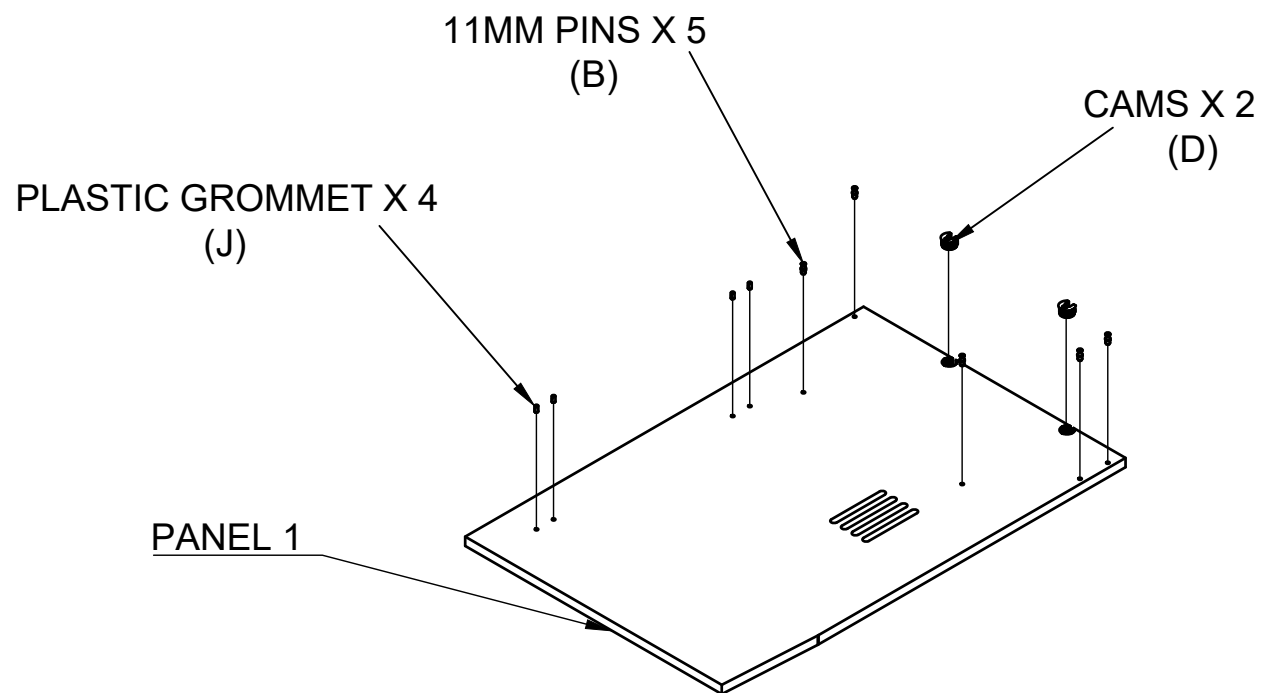


PANEL ASSEMBLY

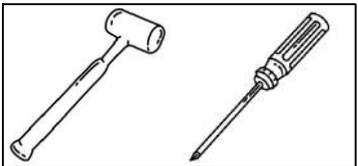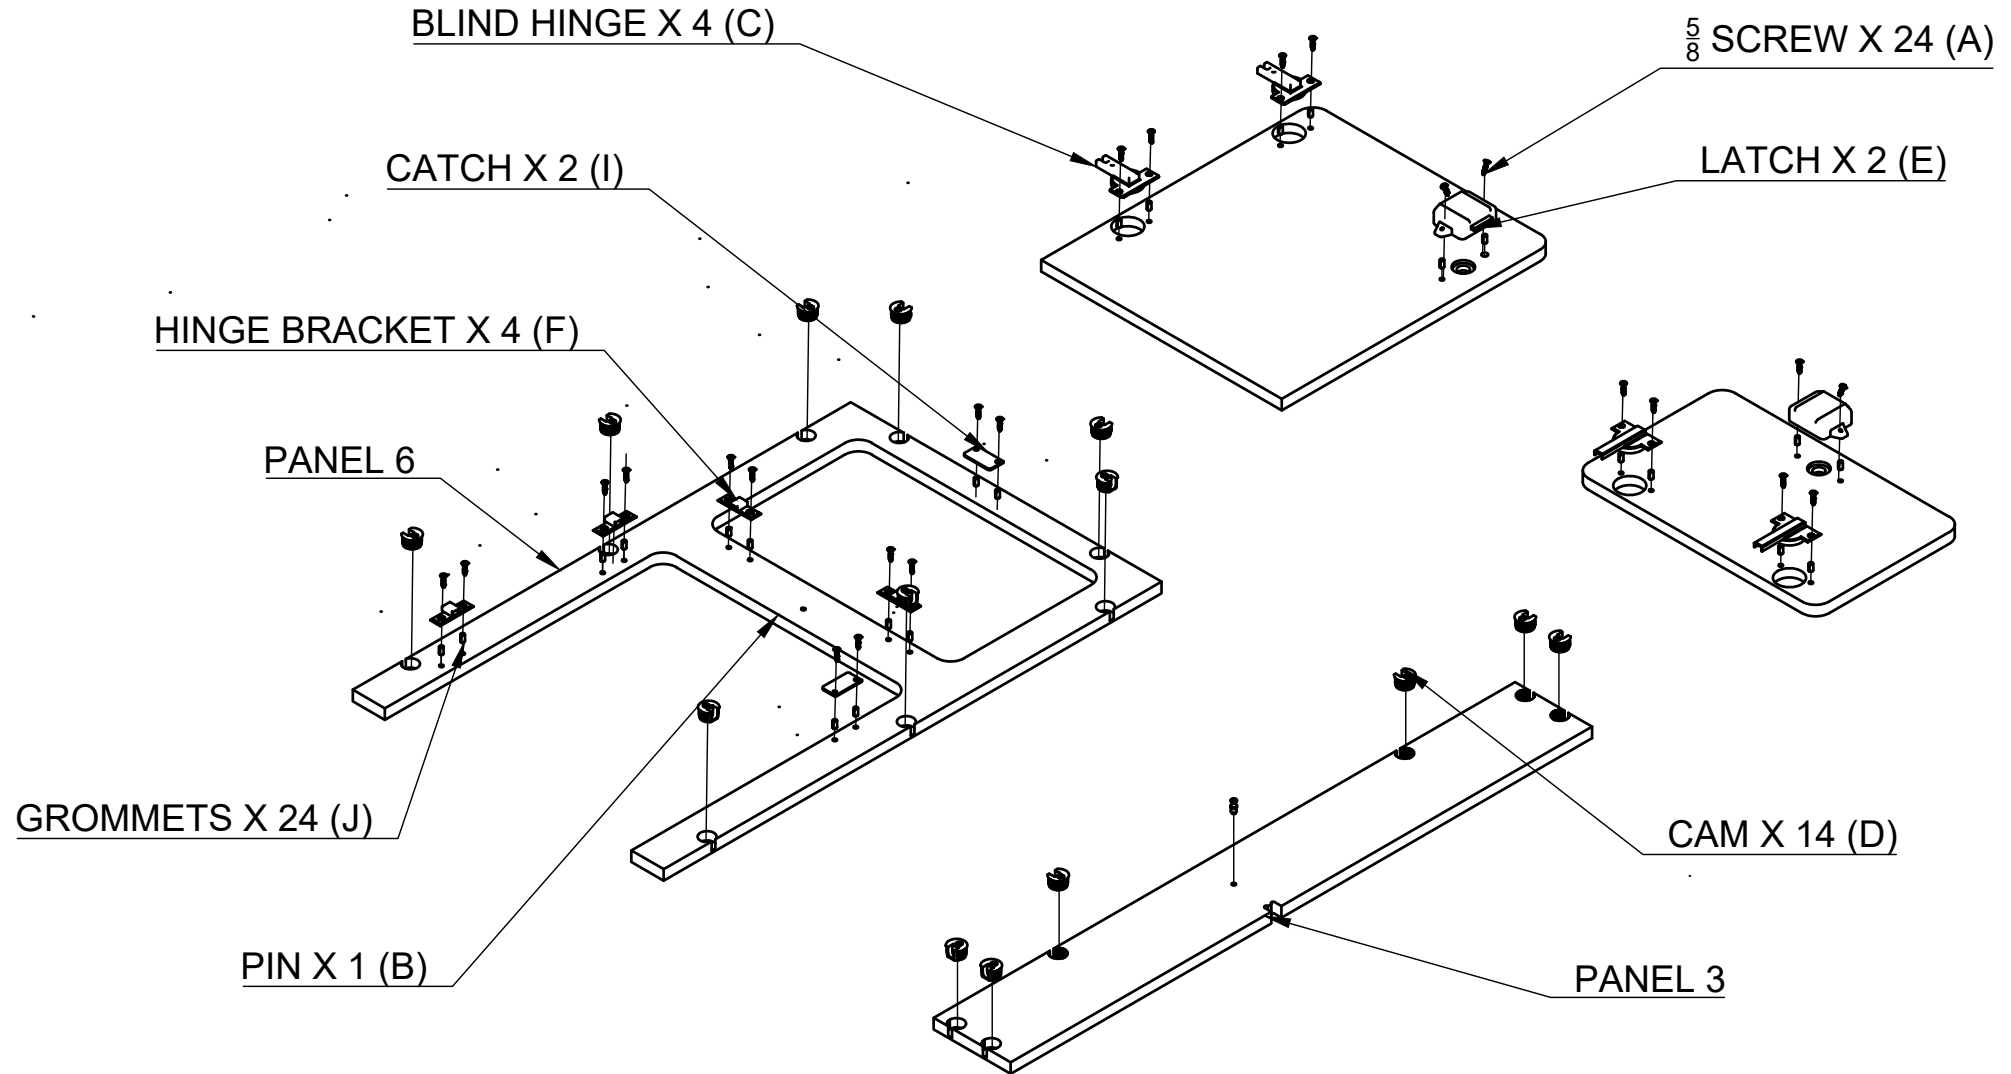


FIX THE DOORS TO PANEL 6 THEN FIX THE CATCH PLATE ON.

PANEL ASSEMBLY

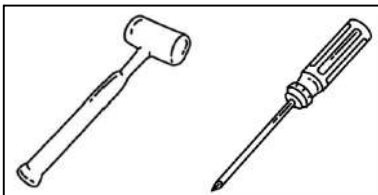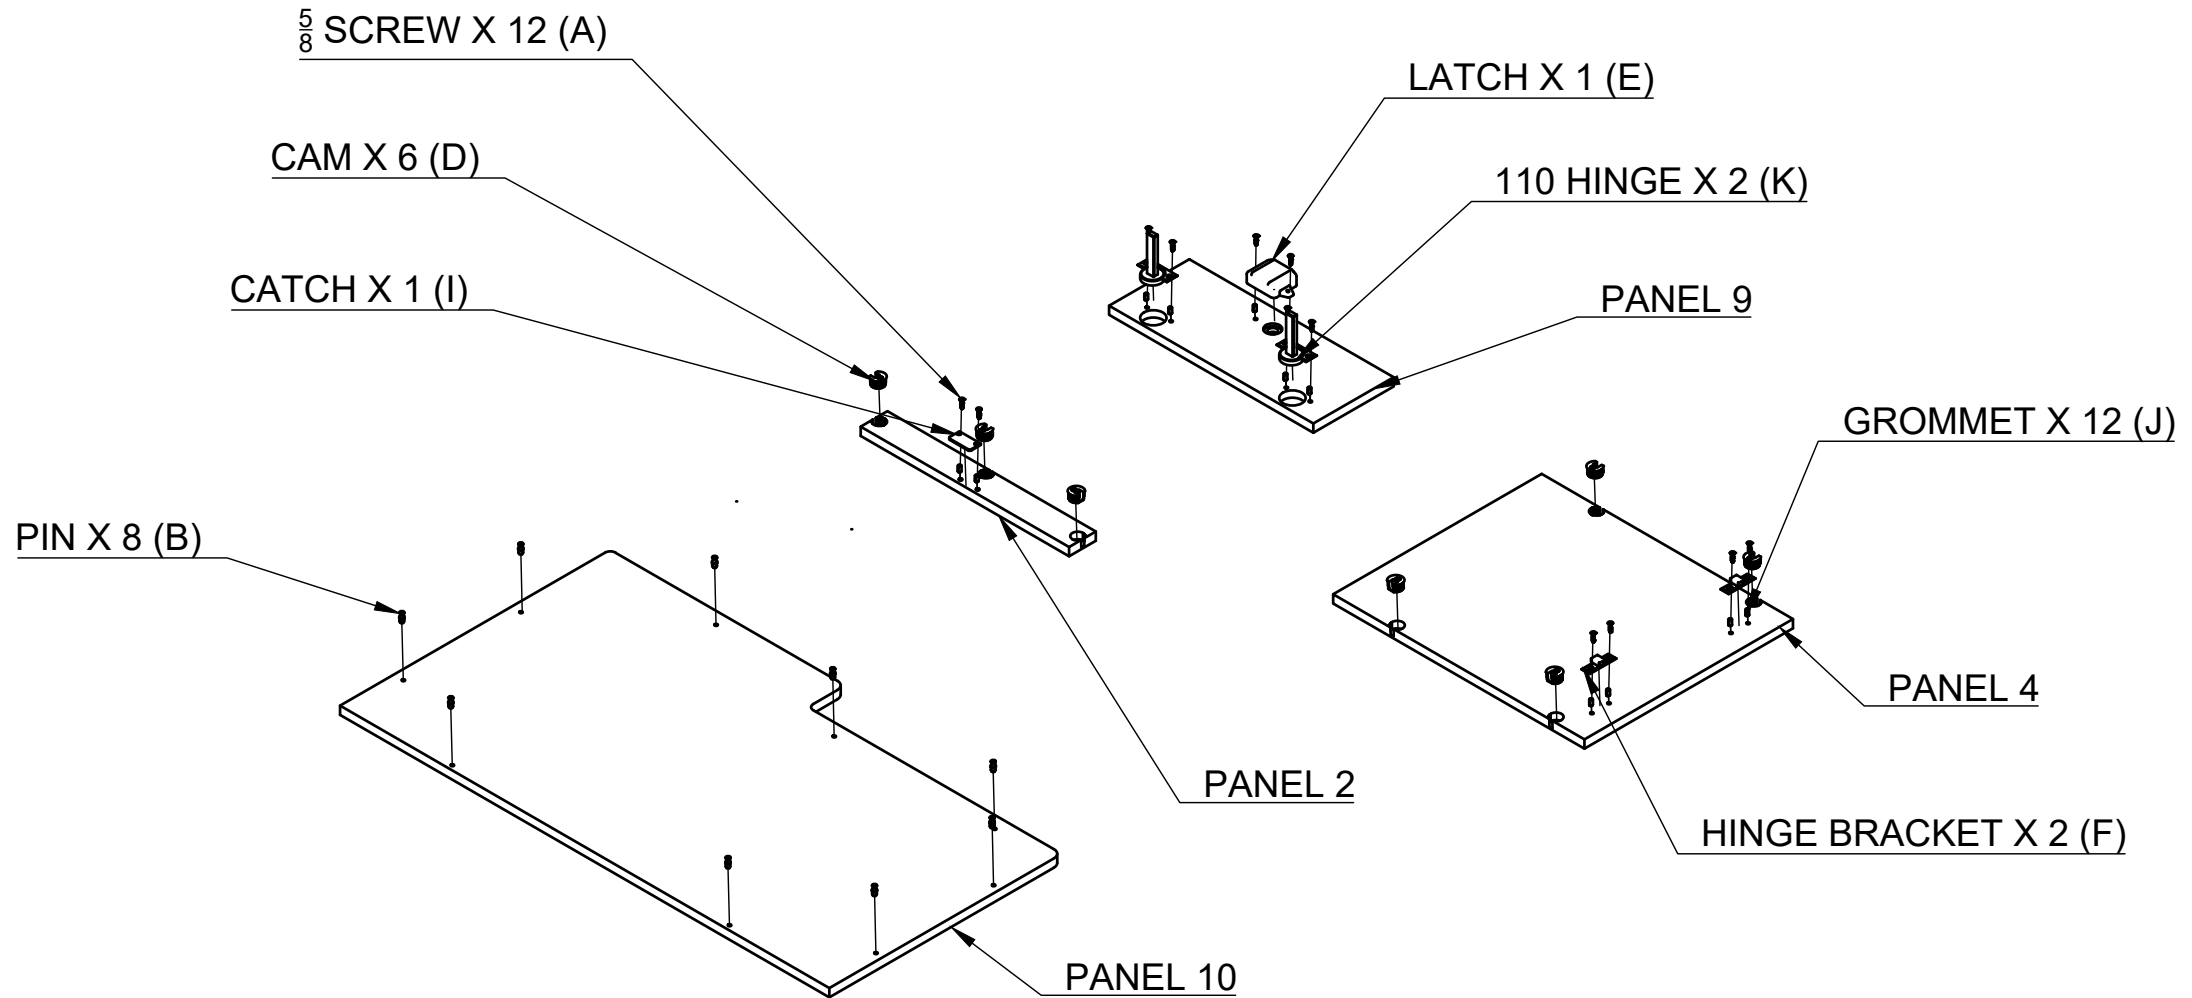


POD ASSEMBLY

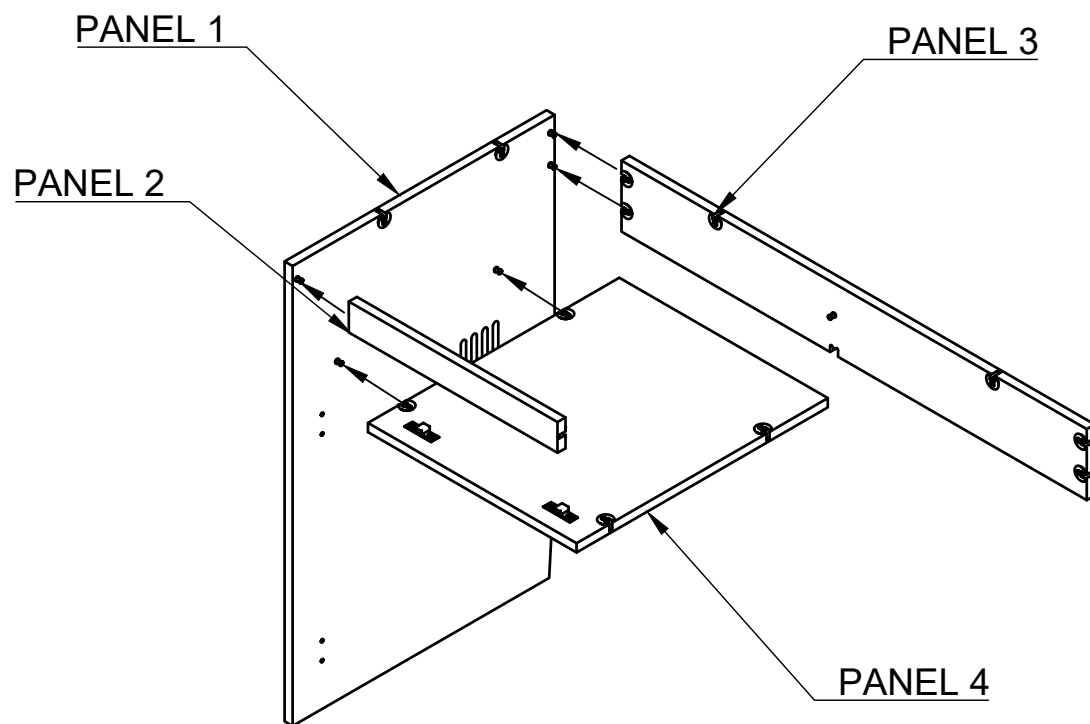



LAY PANEL 1 ON THE FLOOR TO START ASSEMBLY,
LEAVE THE ASSEMBLY ON THE FLOOR UNTIL YOU HAVE
COMPLETED THE NEXT STEP.

POD ASSEMBLY

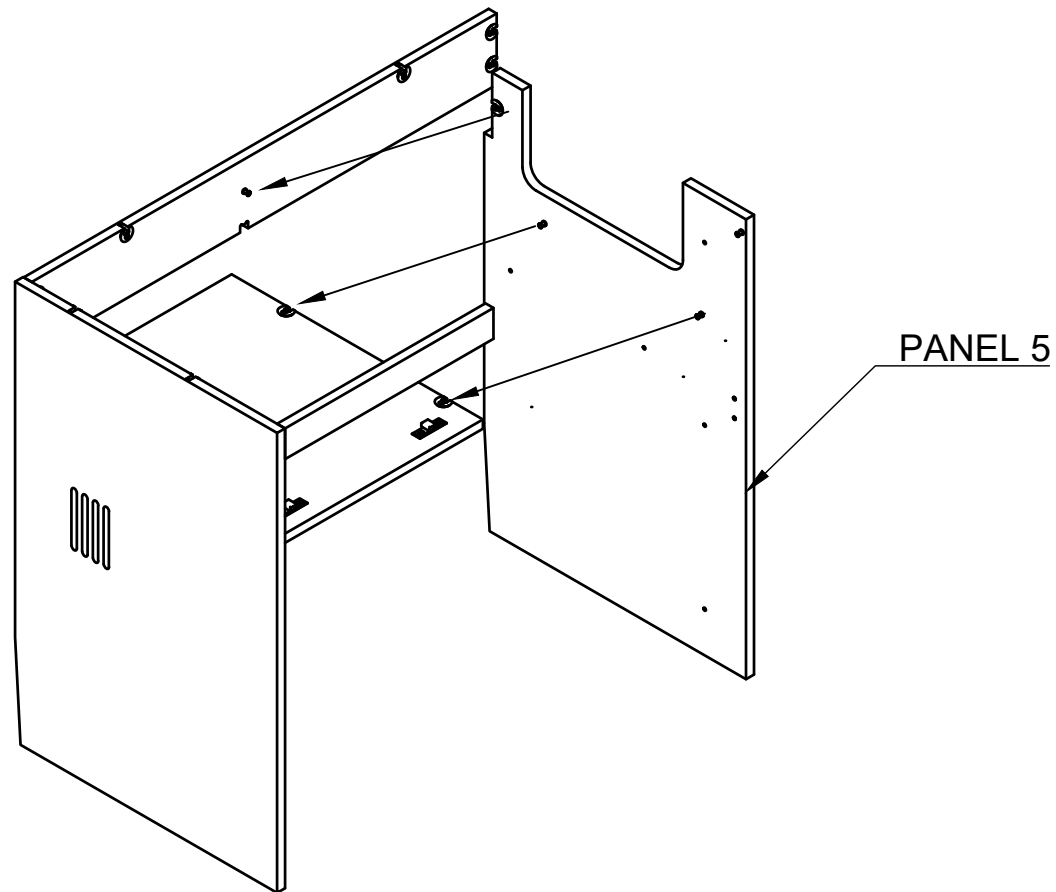


WHEN YOU HAVE PUT PANEL 5 ON
YOU CAN STAND THE POD UP.

POD ASSEMBLY

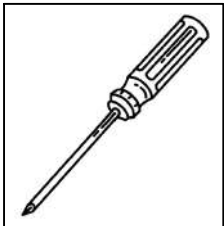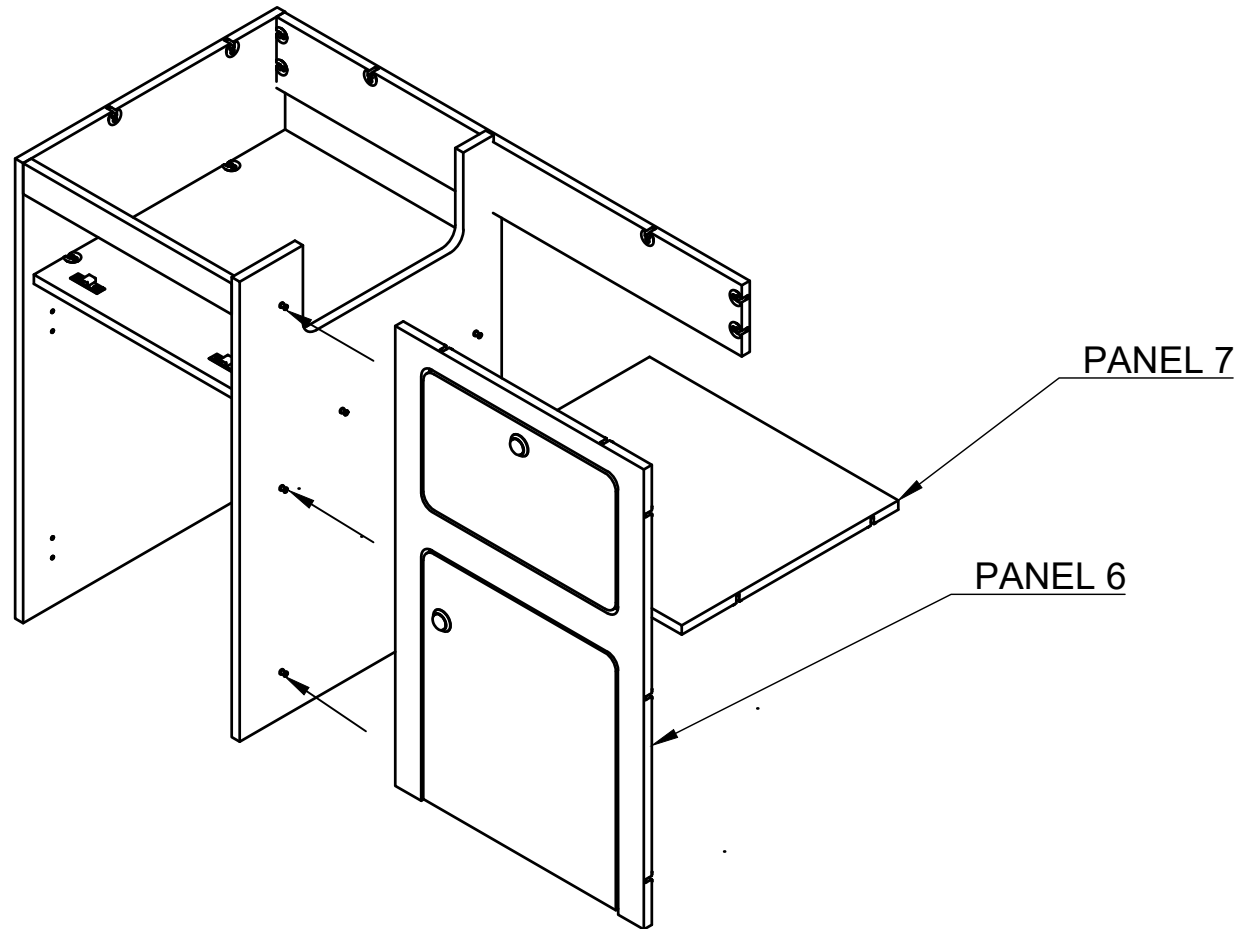


CONNECT 7 TO 6 FIRST, YOU MAY NEED
SOMEONE TO HOLD PANEL 7

POD ASSEMBLY

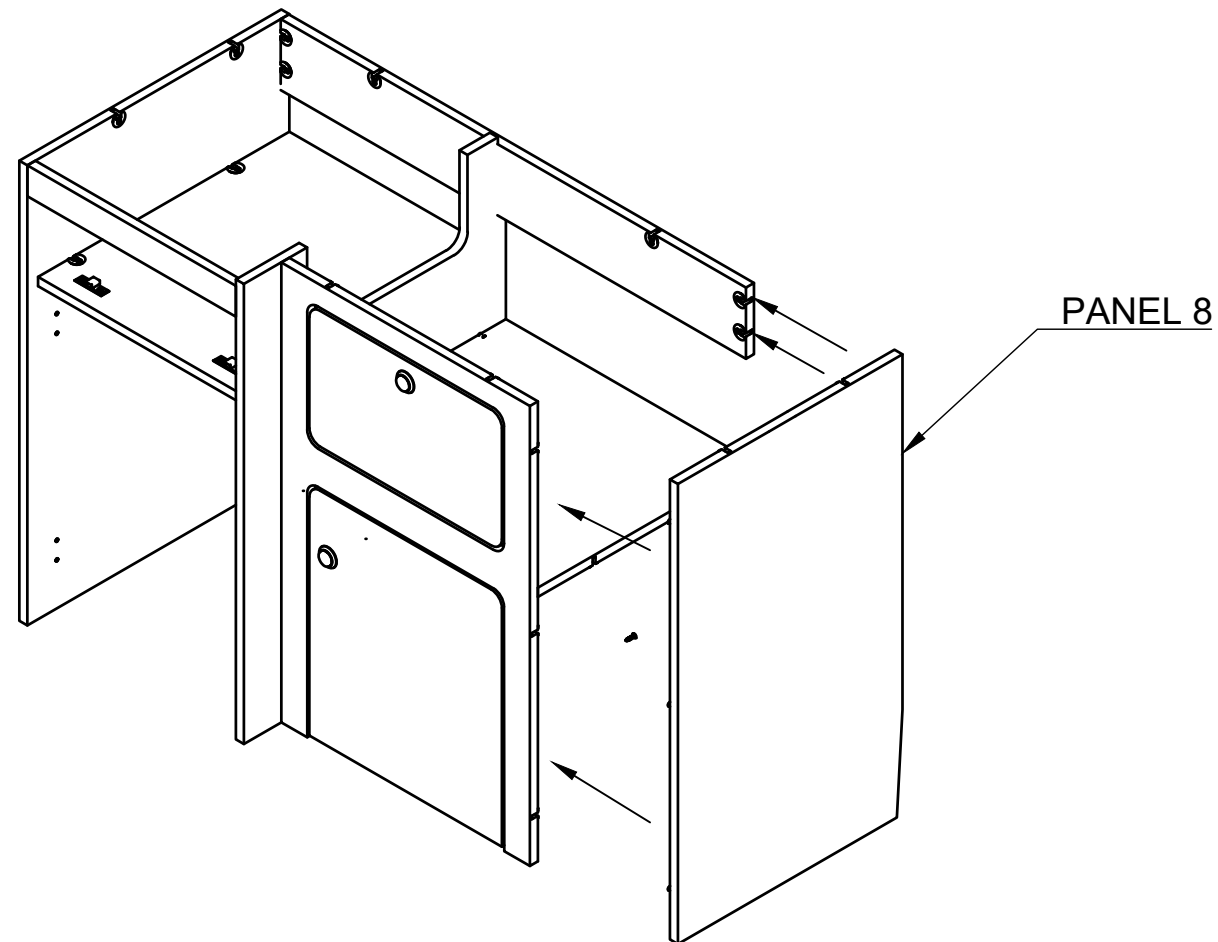

POD ASSEMBLY

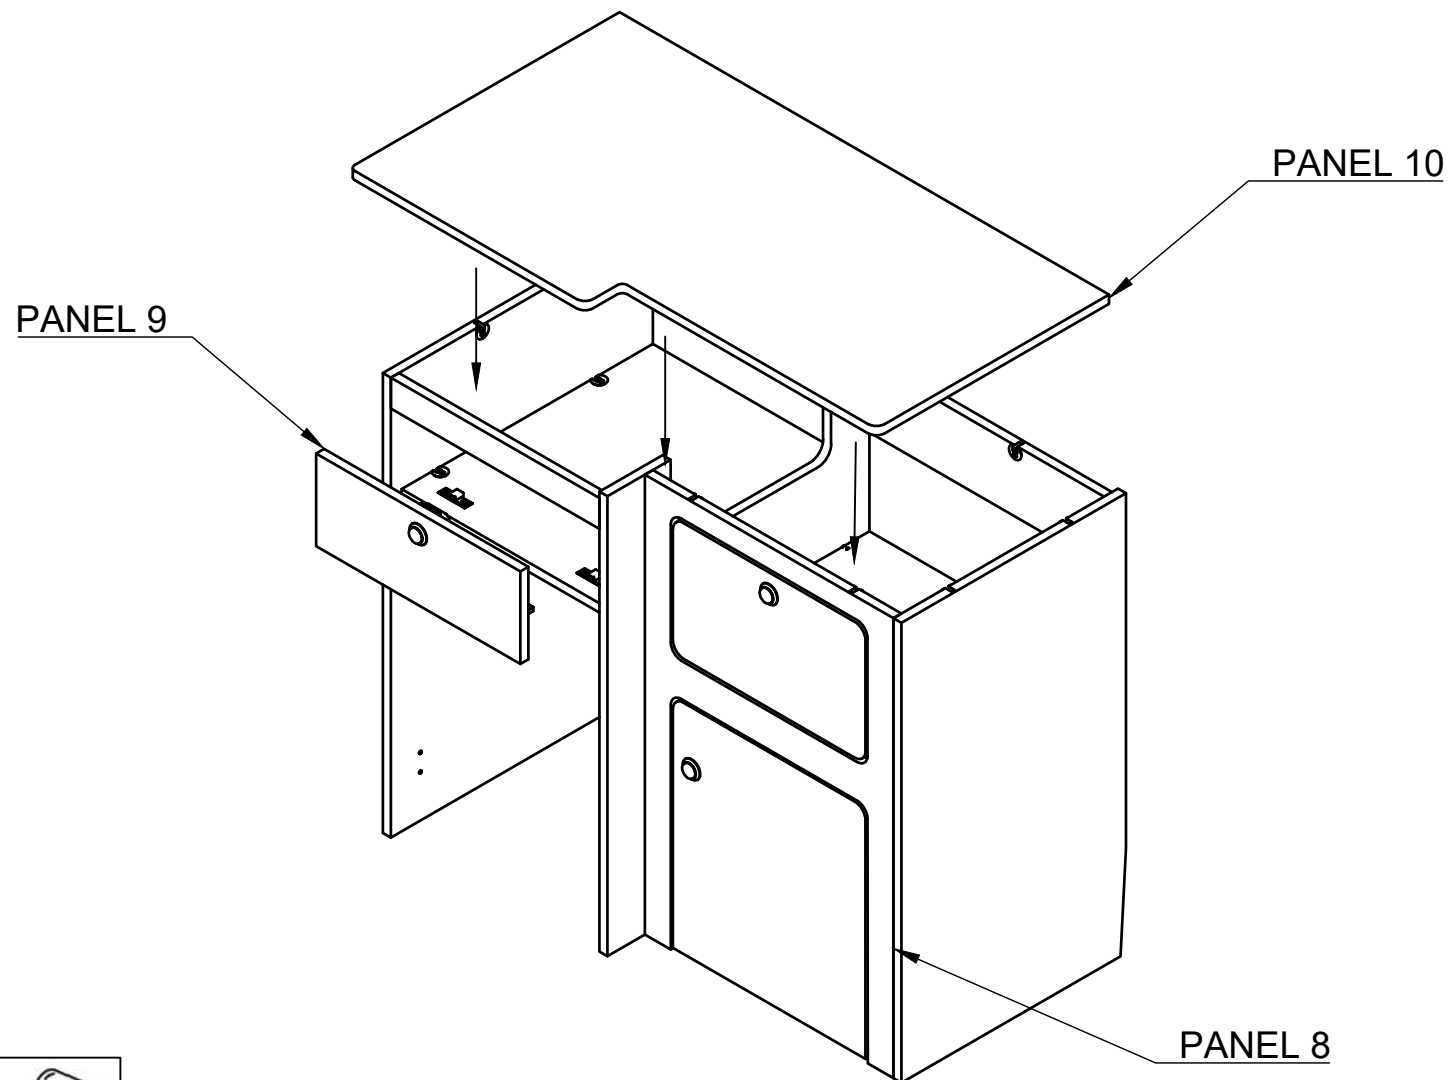

WHEN COMPLETE T-TRIM
PANELS 10 AND 8

